

## CN-6000 Addendum

---

This sheet provides information concerning operation of the CN-6000 that developed after the manual was printed. Item A concerns the inclusion of a browser-based Windows client; item B is a trouble-shooting procedure for administrators in a static IP address environment who are accessing the CN-6000 for the first time:

- A.** The CN-6000 now includes a browser-based Windows client. To connect to the CN-6000 via a browser, specify its IP address in the browser's URL entry field - including a forward slash followed by the CN-6000's web page name. For example:

```
100.00.00.01/cn6k.html
```

After you log in successfully, operation is the same as for the Windows Gui Client. See Chapter 4, The Windows Client, for operating details.

- B.** In order to access the CN6000 it needs to have an IP address that it can be selected by. This is no problem in a DHCP environment where an IP address is automatically assigned to a device when it appears on the network. If an environment uses static IP addresses, however, the device has to be assigned its IP address manually by the administrator. To assign an IP address to the CN-6000 for the first time in a non-DHCP environment, do the following:

1. Power on the CN6000, and wait for the 10/100Mbps LED to light.
2. Run the Administrator Utility (see Chapter 3 of the User Manual).
3. Specify the following IP in the CN6000 address box:  
192.168.0.60  
then Click **Login**.
4. Go to the Network page; enable Set IP address manually; and specify an appropriate static IP address for the domain that the CN-6000 is on.
5. Click OK to exit the Administrator Utility.
6. Power off the CN6000; then power it back on.

Now, the CN-6000 can be seen and accessed via the IP address you assigned to it.

**Note:** When you change a CN-6000's static IP address, you must wait 30 seconds after powering it back on before attempting to access it.